# NITECORE

## **KEEP INNOVATING**

#### **Features**

- FEATURES

  360° Illumination Field Lighting System
  Utilizes CREE XM-L2 LEDs
  Ultra-high output up to 22000 lumens
  A peak beam intensity of 201,200cd and
  a throw distance up to 897 meters
  Suitable for outdoor, construction site,
  square or other areas requiring wide
  range illumination
  Crystal Coating Technology combined
  with "Precision Digital Optics
  Technology" for extreme reflector
  performance
- rectiniongy in externe reliector performance

  Integrated high efficient constant circuit provides max runtime of 40 hours

  4 brightness levels available

  The support includes tripod and

- The support includes tripod aria telescopic poles
   Max extendable height up to 3.8 meters, meets the demands in various scenarios Built-in OLED screen displays brightness levels, battery voltage, runtime and more

  • Aerospace aluminum alloy

# Light Head Tiltable Connectic Adjustment Knob 1 Adjustmen... OLED Screen Power Switch Charging Port (at the backside Leg Locks

Leveling Pad

#### **Accessories**

AC adaptor, high quality and portable nylon bag, 3×diffuser lens

#### **Specifications**

-						
Dimensions	φ0.22m <b>(</b>	0.72ft) x 1	.02m ( 3.35ft )	Height	MAX	3.8m ( 12.47ft )
Weight		13kg ( 28.66	5lbs )	ricigne	MIN	1.02m ( 3.35ft )
	Turbo	200W	22000 lumens	Battery life	Turbo	3h
Brightness	High	75W	10000 lumens		High	8h
Drighticss	Middle	33W	5500 lumens	Dutter y me	Middle	18h
	Low	15W	2000 lumens		Low	40h
Battery capacity	600Wh ( 4	8×18650 Li-	ion, 3400mAh )	Battery voltage		11.1V
Charging time	8h		FLS360 rating		IP66	
charger		C input 100		Charger rating		IP67

NOTE: The data may vary in real-world use due to different environmental conditions

#### **Deploying the FLS360**

1. Set the FLS360 down vertically on a flat surface, and open the nylon bag as shown in diagram (1).

Adjust the light head which is constructed by 3 light panels. The light panels are flexible and adjustable (for directional or 360°configuration) as shown in diagram (2). The angle can be adjusted by the Tiltable Connection as shown in diagram (3).










(2)

 
3. Then, based on preference or need, mount the diffuser lens to the light panels through magnetic

4. Unfold the tripod, there is an Leg Lock on both ends of each tripod. Extend the tripod based on preference by loosening the Leg Locks in anti-clockwise direction, and when the desired length is displayed, screw the Leg Locks clockwise. After unfolding, use the tent peg to fix the FLS360 on the ground as shown in

There is a detachable Leveling Pad on the end of each leg, which can be adjusted according to the terrain After disassembly, one can plug the pipe into the sand or the ground of soft soil as shown in diagram (6).

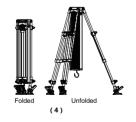





( Pull up the silicone fixed collar and remove the pipe.)

- Adjustment Knob 1

- Adjustment Knob 2

5. Adjust the telescopic pole. There are 3 Adjustment Knobs on the telescopic pole, loosen Knob 1 counter-clockwise to extend the pole and tighten the knob clockwise. To extend further, loosen the Knob 2 and Knob 3 ively, and then tighten them



6. An anchor strap is below the battery compartment. In case of heavy wind, attach a sand bag (or equivalent weight under 5kg) to the ancho strap to reinforce stability.

## **FLS360**

## 360° Illumination Field Lighting System

#### ON/OFF

Turn on: When the FLS360 is off, tap the power switch to enter low mode. At this time, the OLED screen displays the current mode and output, after about 2 seconds, it will display the battery voltage, runtime and remaining power level. The blue power indicator will lit.

Turn off: When the FLS360 is on, press and hold the power switch to turn off the light. At this time, the OLED screen displays battery voltage and remaining power level and then goes out after about 10 seconds. The blue power indicator will blink slowly.

- Warning:

  1. Application temperature: -20°C ~60°C, when the temperature of the operating environment is below -20°C, please place it in a normal temperature environment for half an hour before use.

  2. When the FLS360 is on, the light head will generate heat. Please keep at least 0.5 meter away from it.

  3. When the FLS360 is used for extended periods of time, DO NOT touch the light head in case of scalding. After use, MUST wait for cooling down before storing.
- Avoid direct eye exposure.
   Children under 18 years old must be supervised by an adult when using the FLS360.

#### **Adjusting Brightness**

The FLS360 will enter the Low mode when it is turned on, tap the power switch repeatedly to cycle through "Low-Mid-High-Turbo".

## **Lockout and Unlock**

When the light is off, press and hold the power switch for over 2 seconds to lockout, and the blue indicator will go out. In lockout status, it prevents accidental activation and hardly consumes power. If the power switch is tapped while in lockout, the blue indicator will illuminate and go out after 2 seconds. To unlock, press and hold the power switch for over 2 seconds.

#### Charging

- Insert one end of AC adaptor into the charging port and the other end into a power socket (dedicated car adaptors is optional).
   When the FLS360 is turned off while charging, the maximum charging current is 10A.
   When the FLS360 is turned on while charging, the charging current is 3A.
   If charging via a car adaptor, the charging current is 3A. If using the light while charging, Turbo and High are not acressible.

are not accessible.  $\textbf{NOTE:} \ \, \text{One must start the car before charging the FLS360 via a car adaptor}$ 

#### **Charging Tips**

	Indicator	OLED screen		
Charging	Blink	Battery Voltage	Power Level	
Charging completed	Constant on	Battery Voltage	Full Power Level	
ERROR	Fast blink	ERROR		

- NOTE:

  1. When the FLS360 is switched off while charging, it takes about 8 hours to refill the battery. (it may vary due to different environments and battery health status)

  2. Please recharge the battery in the temperature between 0°C ~45°C.

#### **Protection**

- The built-in battery has protective circuit to prevent the battery from overcharging, over-discharging, over current and short circuit.
   When the battery voltage is low, the FLS360 automatically lowers its output to protect battery.
   If one light panel turns off due to malfunction in Turbo mode, the FLS360 will automatically lower its output to High Mode; if two light panels turns off due to malfunction in Turbo or High mode, the FLS360 will automatically lower its output to Middle Mode.

## Storing the FLS360

- Turn off the FLS360.
   After the FLS360 is turned off, please wait for 10-20 minutes and fold until the temperature of the light heads drops in case of scalding.
   Retract the telescopic pole. Hold the pole above the Adjustment Knob 3 and then loosen it, retract the poles and then tighten the Adjustment Knob 3. Adjust the length of other poles via the Adjustment Knob 2 and Knob 1 by the same way.
   Put the light heads back into the Stored Position. Adjust the light heads to 0° as shown in diagram (3); Adjust 3 light panels to 360° configuration.
   Fold the tripod. Pull out the tent peg, hold the tripod and loosen the Adjustment Knob of the tripod. Retract the tripod and then tighten and fold the tripod.
   Put it into the nylon portable bag.

#### Maintenance

- 2. Keep the light head clean for fear that affecting the heat dissipation of the light panels and light transmittance of the lens.

  3. Regularly check the Tiltable Connection between the light head and telescopic poles, if it is too loose, use wrench to screw up the spindle nut.

#### Caution

- 1. Watch your hands when folding the light heads, telescopic poles and tripod.
  2. The FLS360 is high after it is deployed, please assess the use environment and take protection measures to avoid roll over.
  3. The Tiltable Connection between the light head and the telescopic poles is fragile, please focus on the support part when carrying and DO NOT catch the light head only.
  4. Lockout the FLS360 by long pressing the switch before storing it to avoid accidental activation.
  5. It can be used in raining or even rainstorm environments.
  6. DO NOT immerse the part above battery compartment into water.

### **Warranty Service**

All NITECORE® products are warranted for quality. All defective / malfunctioning NITECORE® products will be repaired free of charge for a period of 12 months from the date of purchase. After 12 months, a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replaceme parts. The warranty is nullified in all of the following situations:

- 1. The product(s) is/are broken down, reconstructed and/or modified by unauthorized parties. 2. The product(s) is/are damaged through improper use.

For the latest information on NITECORE® products and services, please contact your national NITECORE® distributor or send an email to service@nitecore.com

X The Nitecore official website shall prevail in case of any product data changes.

Address: Rm 2601-06, Central Tower, No.5 Xiancun Road, Tianhe District, Guangzhou,510623, Guangdong, China



Please find us on facebook: Nitecore Flashlight



Thanks for purchasing NITECORE!

# NITECOR

∦T斗

伸缩杆

旋钮1

旋钮2

旋钮3

灯头与伸缩杆连接部分

电池仓 (五十二) 充电口

三脚架旋钮

#### 产品特性

- 360°全方位户外移动照明系统
- 采用 CRFF XM-I2 IFD
- 最高 22000 流明超强亮度输出 最大光强 201200 坎德拉,最远射程
- 897米
- 适用于户外、工地、广场等需大范围 昭明场所
- 采用数字精确优化技术制造的光学系
- 采用高效率恒流电路,最长40小时续 航时间
- 设有 4 档亭度可洗
- 支架采用三脚架及伸缩杆设计 可伸展至 3.8 米高,满足用户在不同 场所的使用需求 内建OLED 显示屏,可实时显示亮度、 电池电压、续航时间等信息
- 航太级铝合金制造

#### 配件

AC 充电器、优质尼龙便携袋 3×柔光片

# 主要参数

 
尺寸	φ0.22 米 x 1.02 米			高度	最大	3.8 米
重量	13 千克				最小	1.02 米
	极亮档	200W	22000 流明	续航时间	极亮档	3 小时
亮度	高亮档	75W	10000 流明		高亮档	8 小时
元反	中亮档	33W	5500 流明		中亮档	18 小时
	低亮档	15W	2000 流明		低亮档	40 小时
电池容量	600Wh ( 48	(48×18650 锂电池, 3400mAh)		电池电压		11.1V
充电时间	8 小时			灯具防护等级		IP66
充电器	输入 AC 100 ~ 240V 输出 DC 15V/19A		充电器防护等级		IP67	

注:不同使用环境可能会对以上数据产生影响。

#### 布置 FLS360

1.将 FLS360 垂直放置在平坦的地面上,并解开尼龙便携袋,如图(1)。

2. 调整灯头。灯头由 3 块灯板组成,灯板间角度可灵活调节(定向或 360° ,阿孟凡天。大天田。天八城五城,八城间用房马交后调15(左方向照明),如图(2)。 灯头与伸缩杆连接位置可旋转调节灯头俯仰角度,如图(3)。







(2)



- 3. 用户可根据实际使用需要装上柔光片。柔光片可直接通过磁吸附着在灯板表面。
- 4.展开三脚架。脚管的两端各有1个旋钮,按逆时针方向扭松,伸展脚管至所需长度后按顺时针方向扭紧。展开脚管后,可使用地钉将FLS360固定在地面上增强稳定性,如图455。 脚管末端设有可拆卸活动脚垫,可根据地势调整角度。拆卸脚垫后可直接把脚管插入沙地 或土质松软的地面上使用,如图(6)。



5.调节伸缩杆长度。伸缩杆上有3个旋钮,先按逆时针方向 扭松旋钮1,调节伸缩杆长度后按顺时针方向扭紧。若仍未 达到所需长度,再以相同方式,依次扭松旋钮2及旋钮3 进行调节。

6. 电池仓下方设有倒置悬挂钩,遇上大风天气时,可挂上沙袋(重 量不得超过 5kg ) 以加强支架稳定性。



伸缩杆旋钮2

# **FLS360** 移动照明系统

#### 开启 / 关闭

开启: 在关闭状态下,短按开关按键即开启低亮档,此时显示屏会显示当前档位及流明值, 约2秒后显示电池电压、续航时间及电池剩余电量。位于开关按键的蓝色提示灯会长亮。 关闭: 在开启状态下,长按开关按键即关闭照明,此时显示屏会显示电池电压及电池剩余电量,约10秒后熄灭。蓝色提示灯会慢闪提示用户。

- 1.使用环境温度:-20℃~60℃,当使用环境温度低于-20℃时,须在常温环境下放置半小 时后再使用。
- 时况中设计。 2.FLS360 开启时灯头温度较高,请至少与灯头保持半米距离。 3.长时间开启 FLS360 后,请勿触摸灯头以防烫伤。使用完毕,必须待灯头温度降低后再收起。
- 4.请勿直视光源,以免对眼睛造成损害。 5.未成年人必须在成人监督下使用。

开启 FLS360 即进入低亮档,每次短按开关,将按"低亮档 - 中亮档 - 高亮档 - 极亮档"顺 序循环切换。

#### 锁定及解锁

在关闭状态下,长按开关按键超过2秒即进入锁定状态,此时蓝色指示灯不再闪烁。在锁定状态下,几乎不会消耗电池电量,且开关按键处于锁定状态以防止误触开启。如在锁定后短按开关,蓝色提示灯会亮起,约2秒后熄灭。长按开关按键超过2秒即可解除锁定状态。

・ 当 FLS360 在照明 デオリカー が表示を ・ 当 FLS360 在照明 デオリカー が表示が ・ 当 FLS360 在照明 デオリカー が表示が ・ 当 FLS360 在照明 开启状态下进行充电 , 充电电流力 3A。 ・ 如使用 年充充电线 対 FLS360 进行充电 , 充电电流力 3A。此时如 开启照明 , 将不能 开启

- 极高档和高高档

注:使用车充充电前,必须先启动车辆。

#### 充电提示

	提示灯	·屏		
充电中	闪烁	当前电池电压	充电进度条	
充电完成	长亮	当前电池电压	电量条满格	
充电异常	快速闪烁	"ERROR"字样		

- 1.在不开启照明情况下为电池充电,所需充电时间约为8小时。(不同环境及电池健康状态
- 对充电时间会产生影响) 2.请在环境温度为0℃~45℃范围内,对电池进行充电。

- 内置电池设有保护电路,可防止电池出现过充、过放、过流及短路情况。
  当电池电压过低时,FLS360 会自动降档,以保护电池。
  使用极亮档时,如果其中1块灯板因故障熄灭,FLS360 会自动降至高亮档;使用极亮档 或高亮档时,如果有2块灯板因故障熄灭,会自动降至中亮档。

#### 存放 FLS360

- 关闭 FLS360。
   关闭 FLS360。
   关闭后,请放置 10-20 分钟,待灯头部分温度下降后再收起,以免烫伤。
   收起伸缩杆,抓紧旋钮 3 上方的伸缩杆部分并扭松旋钮 3,缩短伸缩杆后扭紧。以相同方
- 其面向360°方向。 收起三脚架。拔出地钉,抓紧伸缩杆部分,扭松脚管旋钮,缩短脚管后扭紧,收起脚管。
- 装入尼龙便携袋。

## 保养

- 7. 当长时间储存 FLS360,请每半年为电池充电 5 小时。 2. 请保持灯头部分清洁,以免影响灯板散热及镜片透光度。 3. 请定期检查灯头与伸缩杆之间连接部分,如果太松,可以用扳手适当拧紧转轴螺母。

- 收回灯头、伸缩杆和三脚架时,请注意不要夹伤手。
   FLS360展开后整体高度较高,请评估使用环境,做好防护措施,以防侧翻。
   灯头与伸缩杆之间连接部分比较脆弱,搬运时请着力于支架部分,避免只抓住灯头部分搬
- 4.将 FLS360 装袋收纳前,请长按开关锁定,以防误触开启。 5.在雨天(甚至暴雨)环境下,不影响使用。 6.请勿让电池仓及以上部分浸泡在水中。

 
## 保固

NITECORE®产品拥有售后保固服务。在购买本产品的12个月内享受免费保固服务。在超过12个月免费保固期后,本产品享有终身有限度保固服务,如需要更换重要部件则需收取 成本费用。

本保固规则不适用于以下情况: 1.人为破坏,拆解,改装本产品。 2.错误操作导致产品损坏。

如对奈特科尔产品有任何疑问,欢迎联系当地的代理商或发邮件到

※本说明书的所有图片、陈述及文字信息仅供参考,请以官网 www.nitecore.cn 实际信息 为准。思迈工贸有限公司拥有对说明书内容的最终解释权和修改权。



● 更多信息请关注新浪微博: NITECORE 奈特科尔



思迈工贸有限公司 咨询热线:+86-20-83862000 销售邮箱:info@nitecore.con 

400 客户服务热线: 400-886-9828 感谢您购买我们的产品!